


TPL

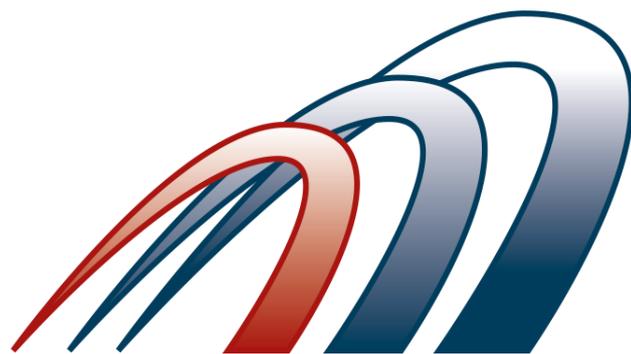

SYSTEMS ASIA-PACIFIC

Hand Program Manual

BIRDY WPs-r2

Firmware: Version 1.00.6

**For service and support please contact
your local reseller on TPL directly on**

1300 001 875, email

service@tplsystems.com.au

**Please note that all features in this manual may not be available depending
on the program settings.**





BIRDY WPs-R2 presentation

1. Mechanical presentation



2. Icons description

	Power-on indicator light		Alert message in memory
	Active ringtone		Read alert message
	Programmed alarm clock		Battery level



3. Symbol description

According to the chosen menu, keys may have different meanings. That's the reason why a symbol is displayed above the keys on the screen in order to give the meaning of the keys.

Symbol	Description
✓	The key relates to the « validation » function
✕	The key relates to the « cancellation » function
♪	The key relates to the « sound testing » function
↑ ↓	Possible use of keys ▼ and ▲
< >	Possible use of keys ◀ and ▶



4. To enter Hand Programing Mode

1. Press key
2. Simultaneously press the keys and you will get the capcode screen:



3. When you see the above screen simultaneously press and hold the Keys until you see the below screen:



4. Use the Keys to move between the options." "is "Radio Receiver" and "I" is "Identities (Capcodes)":



5. Identities management (Capcode) « I »

3. Press key  to select "I" from the hand program menu and you will see the below screen:



4. Press key  to select Capcode
5. Press key  to access the Capcode to change or enable
6. Press key  or  to change the Capcode
7. Press key  to confirm

6. Frequency and baud rate management « Y »

1. Press key  to select "Y" from the hand program menu and you will see the below screen:





2. Press key  to select "F/Bds" and you will see the below screen:



4. Press key  to select the number to change on the frequency
5. Press key  to change the numbers from 0-9
6. Press key  to move between the numbers and change as required with the  keys
7. Press key  to move from the frequency to the baud rate and use  keys to change
7. Press key  to confirm the change and then the  key to exit.

7. Other menu items

- **Version** «  »
 1. Press key  to access menu
 2. Press key  to go to the technical menu
 3. Press key  to go the menu VERSION and check the version

- **LCD contrast** «  »
 1. Press key  to access menu
 2. Press key  to go to the technical menu
 3. Press key  to go to the LCD CONTRAST and check
 4. Press key  to manage contrast
 5. Press key  to confirm

- **Serial number** «  »
 1. Press key  to access menu
 2. Press key  to go to the technical menu
 3. Press key  to go to the SERIAL NUMBER and check



- Battery level «  »

1. Press key  to access menu
2. Press key   to go to the technical menu
3. Press key   to go to the BATTERY LEVEL and check

- Autotest «  »

1. Press key  to access menu
2. Press key   to go to the technical menu
3. Press key   to go to the AUTOTEST
5. Press key  to confirm